


PRODUCT MANUAL

Smart LiFePO4

12V 100Ah

Low Temperature Heating

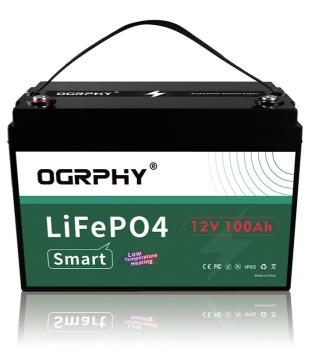

@www.ogrphytech.com

🖻 service@ogrphytech.com

OGRPHY

Shenzhen Ogrphy Technology Co., Ltd

OGRPHY[®] Green Power Solution Expert



THANK YOU FOR CHOOSING OGRPHY.

Pls read the product manual carefully before using the unit. Using the LiFePO4 battery in a proper way helps you maximum its performance, extend cycle life, and avoid unnecessary damage.

Ready? Start to create your green and powerful life with Ogrphy now!

CONTENTS

PRODUCT SPECIFICATIONS 01

CAUTIONS&WARRANTY 02
Cautions ····································
Warranty

03
03
03
04
04

05
05
05
06
06

PRODUCT SPECIFICATIONS



Smart 12V 100Ah

Nominal Voltage	12.8V
Charge Voltage	14.4±0.2V
Nominal Capacity	100Ah
BMS Board	100A
Energy	1280Wh
Max Load Power	1280W
Max Continuous Charging Current	50A
Max Continuous Discharging Current	100A
Max Discharging Current	300A(Lasts for 3-5 seconds)
Connect in Series/Parallel	Max 4 in Series and 4 in Parallel (Total 16 batteries)
Cycle Life	2000-5000 times
Working Temperature	Charging Temperature: -20°C to 55°C Discharging Temperature: -20°C to -60°C
Weight	24.2lbs
Dimension	12.9*6.7*8.4inch
Recommend Solar Panel Configuration (Fully charges with effective sunshine 4.5h/day)	300w
Wire(s) for Series & Parallel Connection / Loading	4AWG

CAUTIONS&WARRANTY

CAUTIONS:

- DO NOT short circuit
- DO NOT reverse charging
- DO NOT disassemble
- DO NOT drop
- DO NOT expose to heat or immerse in water
- Away from kids and pets

WARRANTY:

We commit you five years warranty for each Ogrphy battery, only if the battery is being correctly used according to our guidance and instructions. If you need our assistance, pls contact our service team for support. We promise to reply you in 24 hours.

If the battery can not be fixed, pls contact our customer service for prepaid return label, then send back the battery back to our warehouse. After we receive the return item, we will arrange the replacement or refund.

WARRANTY CARD

Thank you for purchasing Ogrphy LiFePO4 battery.

Fill in for future reference	
Date Purchased:	Tel:
Order No.:	Email Add:

OGRPHY

CHARGE&DISCHARGE

Recharge the battery at 20% capacity left will increase the cycle times of the lifepo4 battery.

RECOMMEND CHARGING METHOD:

- Option 1: Use lithium iron phosphate battery charger, with charging voltage 14.2V-14.6V
- Option 2: Use inverter/controller, select 12V lithium iron phosphate battery mode and set as below,

SETTING for CHARGE CONTROLLER: CHARGE

- Charging limit voltage: 14.6V
- Overvoltage disconnect voltage: 15V
- Overvoltage re-connection voltage: 14.2V

DISCHARGE

- Low voltage disconnection voltage: 10.8V
- Low voltage reconnection voltage: 11.6V
- Undervoltage warning voltage: 12.4V

CHARGING/DISCHARGING TEMPERATURE REQUIREMENT:

Charging Temperature: 0°C to 55°C Discharging Temperature: -20°C to 60°C

CHARGE&DISCHARGE

LOW TEMPERATURE HEATING

When the ambient temperature is lower than $32^{\circ}F(0^{\circ}C)$, the BMS will stop charging the battery and start to heat the film inside, until the internal temperature of the battery reaches $50^{\circ}F(10^{\circ}C)$.

Tips:

- Only when the battery is under charging mode, the heating function can be turned on
- Charging current should be \geq 5A

Pls scan with the APP below for installation to monitor battery's state for a better management.

Password:666666



DEPTH OF DISCHARGE(DOD)

DOD 100% (charging 100%, and discharging 100%), the battery gets 2000 circles DOD 80% (charging 100%, and discharging 80%), the battery gets 5000 circles

OGRPHY

OGRPHY

CONNECTION TIPS

PREMISE OF CONNECTION:

To connect batteries in series or/and in parallel, batteries are supposed to be

- with same capacity (Ah)
- from same brand (in case of different BMS)
- in short purchase interval (within one month)

Before connected in series/in parallel, please balance the voltage of the batteries: Connect the batteries in parallel until the difference of their voltage is lower than 30mV.

LIMITATION FOR SERIES/PARALLEL CONNECTION

Support connection up to 4 series or 4 parallel.


E.g, connect 4 pcs 12V 100Ah batteries in series, you'll got 48V 100Ah battery system; connect 4 pcs 12V 100Ah batteries in parallel, you'll got 12V 400Ah battery system

PARALLEL/SERIES CONNECTION

CONNECTION BOTH IN PARALLEL&SERIES

Pls be reminded 48V is the maximum for connection both in series and parallel battery system.

- Step1 Connect the batteries in parallel
- Step2 Connect the parallel battery systems in series

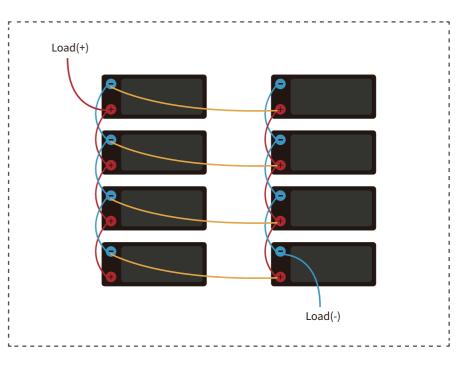

MAINTENANCE AND STORAGE:

Charge your battery every 3 months if it hasn't been used for a long time Storage Environment: 0 °C to 45 °C@60 \pm 25% relative humidity

OGRPHY

HOW TO ACTIVATE THE BATTERY WHEN BMS CUT IT OFF FOR PROTECTION?

The built-in Battery Management System(BMS) provides protection for overcharge, over-discharge, overload, overheating and short circuit.

If the BMS has cut off the battery for protection, cut off the load and put the battery aside for 30 minutes. The battery will automatically recover itself to normal voltage then, and you may use the battery after it fully charged.

If the battery is unable to recover itself and its voltage is too low to hold a charge, you can activate it in below ways:

①Use the charger with 0V charging function to fully charge the battery

②Parallel with another 12V lithium battery(or 12V-14.6V lead-acid battery) for a minute

③Use 12V/18V solar panel to charge the battery for about 3 seconds

For Ogrphy customers

who request a warranty, return or exchange We are here to help

Service@ogrphytech.com